



edwardsvacuum.com

Cryo-Torr® Pump

INSTALLATION, OPERATION AND MAINTENANCE MANUAL

Copyright notice

©Edwards Limited 2024. All rights reserved.

Published: 10/18/2024

Trademark credit

Edwards and the Edwards logo are trademarks of Edwards Limited, Innovation Drive, Burgess Hill, West Sussex, UK, RH15 9TW

Disclaimer

The content of this manual may change from time to time without notice. We accept no liability for any errors that may appear in this manual nor do we make any expressed or implied warranties regarding the content. As far as practical we have ensured that the products have been designed and constructed to be safe and without risks when properly installed and used in accordance with their operating instructions.

We accept no liability for loss of profit, loss of market or any other indirect or consequential loss whatsoever.

Product warranty and limit of liability are dealt with in our standard terms and conditions of sale or negotiated contract under which this document is supplied.

You must use this product as described in this manual. Read the manual before you install, operate, or maintain the product. For manual enquiries, email manuals@edwardsvacuum.com.

Contents

1. Safety and compliance.	7
1.1 Definition of Warnings and Cautions.	7
1.2 Trained personnel	7
1.3 Safety symbols.	8
2. Description.	9
2.1 General.	9
2.2 Installation, operation and servicing instructions.	9
3. Technical data.	13
3.1 Specifications.	13
3.2 Cryo-Torr Operating and storage conditions.	19
4. Installation.	20
4.1 Vent pipe connection.	21
4.2 Roughing pump connection.	21
4.3 Purge gas connection.	21
4.4 Helium return and supply line connections.	22
4.5 Power cable connection.	23
4.6 Crossover pressure calculations.	23
4.6.1 Optimizing crossover pressure.	24
4.7 Cryo-Torr Cryopump capacity calculations.	24
4.8 Crossover cycle calculations.	24
4.9 Cryopump start-up procedure.	25
4.10 Cryopump shutdown procedure.	25
4.11 Cryopump storage.	26
5. Operation.	27
5.1 Cold head.	27
5.2 Vacuum vessel and arrays.	27
5.3 Compressor gas and oil flows.	28
5.4 Cryo-Torr interface.	29
6. Regeneration.	33
6.1 When to regenerate.	33
6.2 Assisted regeneration.	33
7. Maintenance.	35
7.1 Helium circuit decontamination.	35
7.2 Cryo-Torr Cryopump decontamination procedures.	35

7.3 Cleaning the Cryo-Torr Cryopump. 36

8. Fault finding. 38

9. Appendix - Customer technical support information. 40

10. Service. 41

10.1 Return the equipment or components for service 41

List of Figures

Figure 1: Cryo-Torr 4F.	9
Figure 2: Cryo-Torr 8.	10
Figure 3: Cryo-Torr 8F.	10
Figure 4: Cryo-Torr 10.	10
Figure 5: Cryo-Torr 100.	11
Figure 6: Cryo-Torr 250F.	11
Figure 7: Cryo-Torr 20HP.	11
Figure 8: Cryo-Torr 400.	12
Figure 9: Cryo-Torr 500.	12
Figure 10: Block diagram for Cryo-Torr system installation.	20
Figure 11: Gas/Electrical components on a typical Cryo-Torr Cryopump.	22
Figure 12: Cutaway view of a typical Cryo-Torr pump.	28
Figure 13: Cryo-Torr interface.	29
Figure 14: Typical Cryo-Torr system with 9600 series compressor.	30
Figure 15: Typical Cryo-Torr system with 8200 series compressor.	31
Figure 16: Typical Cryo-Torr system with 8600 series compressor.	32

List of Tables

Table 1: Specifications Cryo-Torr 4F.	13
Table 2: Specifications Cryo-Torr 8.	13
Table 3: Specifications Cryo-Torr 8F.	14
Table 4: Specifications Cryo-Torr 10.	14
Table 5: Specifications Cryo-Torr 10F.	15
Table 6: Specifications Cryo-Torr 250F standard capacity.	15
Table 7: Specifications Cryo-Torr 250FH high capacity.	16
Table 8: Specifications Cryo-Torr 400 standard capacity.	16
Table 9: Specifications Cryo-Torr 400 high capacity.	17
Table 10: Specifications Cryo-Torr 500.	18
Table 11: Specifications Cryo-Torr 20HP.	18
Table 12: Specifications Diode Voltage vs. Temperature.	19
Table 13: Cryo-Torr operating and storage conditions.	19
Table 14: Crossover values.	23
Table 15: Condensable gases capacity (Argon, Nitrogen, Oxygen, etc).	24
Table 16: Required accessories for assisted regeneration.	34
Table 17: Indium gasket screw torque specifications.	37
Table 18: Fault finding.	38

1. Safety and compliance

For safe operation from the start, read these instructions carefully before you install or commission the equipment and keep them safe for future use. Read all the safety instructions in this section and the rest of this manual carefully and make sure that you obey these instructions.

The instruction manual is an important safety document that we often deliver digitally. It is your responsibility to keep the instruction manual available and visible while working with the equipment. Please download the digital version of the instruction manual for use on your device or print it if a device will not be available.

1.1 Definition of Warnings and Cautions

Important safety information is highlighted as warning and caution instructions which are defined as follows. Different symbols are used according to the type of hazard.

WARNING:

If you do not obey a warning, there is a risk of injury or death.

CAUTION:

If you do not obey a caution, there is a risk of minor injury, damage to equipment, related equipment or process.

NOTICE:

Information about properties or instructions for an action which, if ignored, will cause damage to the equipment.

We reserve the right to change the design and the stated data. The illustrations are not binding.

1.2 Trained personnel

For the operation of this equipment “trained personnel” are:

- skilled workers with knowledge in the fields of mechanics, electrical engineering, pollution abatement and vacuum technology and
- personnel specially trained for the operation of vacuum pumps

1.3 Safety symbols

The safety symbols on the products show the areas where care and attention is necessary.

The safety symbols that we use on the product or in the product documentation have the following meanings:

	Warning/Caution Risk of injury and/or damage to equipment. An appropriate safety instruction must be followed or a potential hazard exists.
	Warning - Corrosive substances Risk of injury or damage to equipment. Identifies the presence of corrosive gases, liquids or materials.
	Warning - Dangerous voltage Risk of injury. Identifies possible sources of hazardous electrical shock.
	Warning - Flammable material Risk of fire. Identifies possible sources of flammable gases, liquids or materials.
	Warning - Toxic material Risk of injury or damage to the environment. Identifies a source of toxic gases, liquid or material.
	Warning - Use protective equipment Risk of injury. Use appropriate Personal Protective Equipment (PPE) when performing the task.

2. Description

2.1 General

Cryo-Torr pumps, are one of the two major components that make up the Cryo-Torr Pumping System. The second component is the Compressor. Instructions for the compressor are contained in each compressor manual.

The Cryo-Torr Pump provides fast, clean pumping of all gases in the 10^{-3} to 10^{-9} Torr range. The Cryopump operates on the principle that gases can be condensed and held at extremely low vapour pressures, achieving high speeds and throughputs, as described in [Specifications](#) on page 13.

Your Cryo-Torr Pump is a highly-reliable and rugged unit that requires a minimum of servicing. Since the Cryopump exposes no moving parts, operating fluids, or backing pumps to the vacuum, the possibility of system or process contamination from the Cryopump itself is eliminated.

2.2 Installation, operation and servicing instructions

Installation, Operation and Maintenance Instructions for your Cryo-Torr vacuum pump provides easily accessible information. All personnel with installation, operation, and servicing responsibilities should become familiar with the contents of these instructions to make sure safe, reliable Cryopump performance.

Figure 1 Cryo-Torr 4F

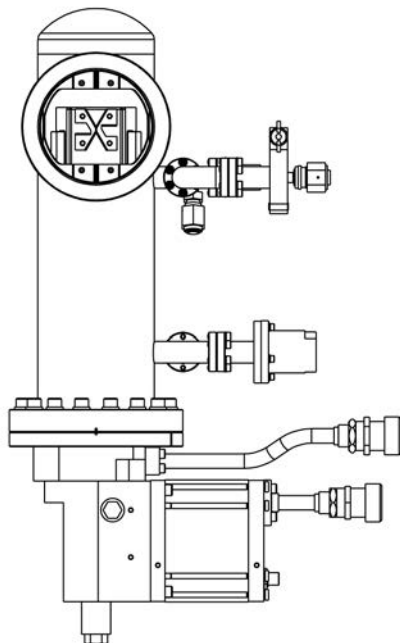


Figure 2 Cryo-Torr 8

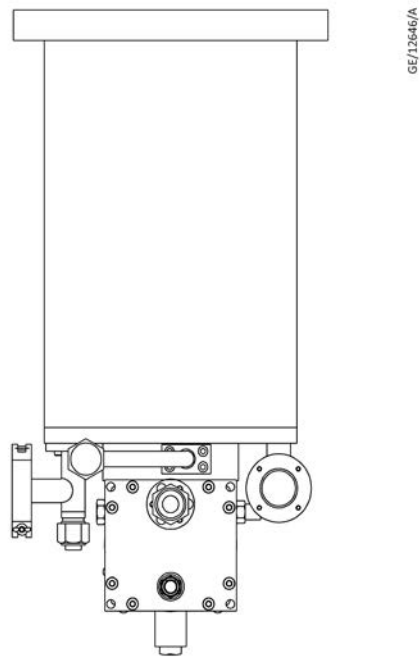


Figure 3 Cryo-Torr 8F

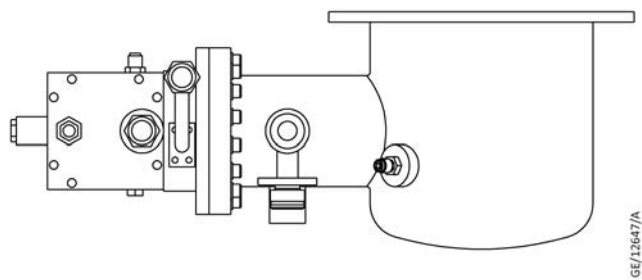


Figure 4 Cryo-Torr 10

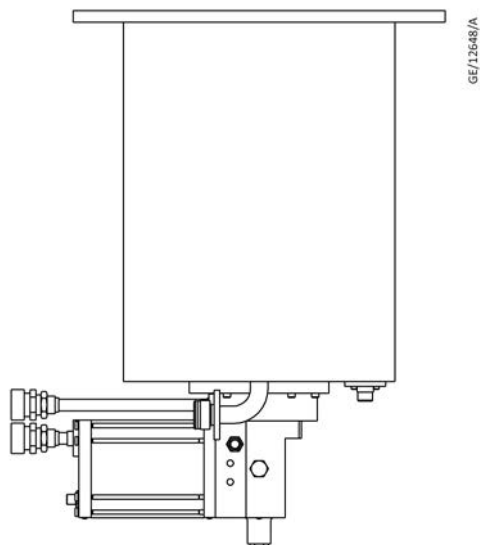


Figure 5 Cryo-Torr 100

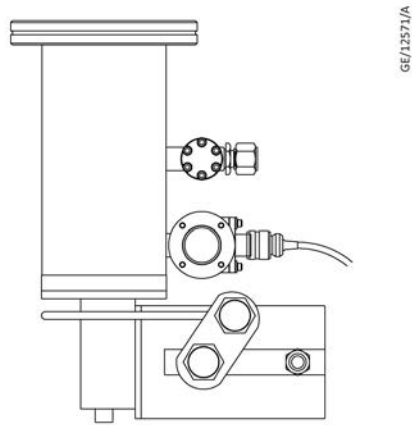


Figure 6 Cryo-Torr 250F

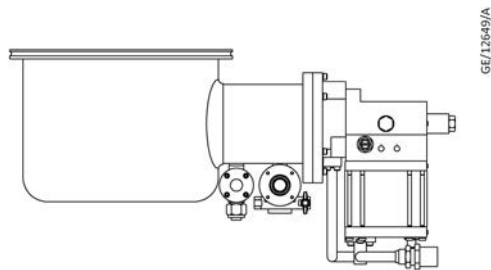


Figure 7 Cryo-Torr 20HP

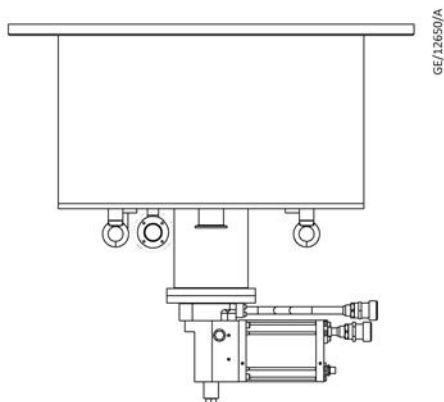


Figure 8 Cryo-Torr 400


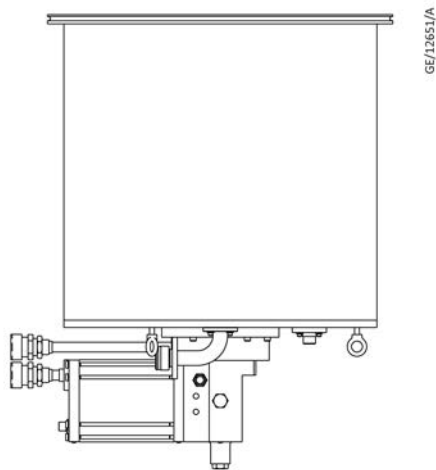


Figure 9 Cryo-Torr 500

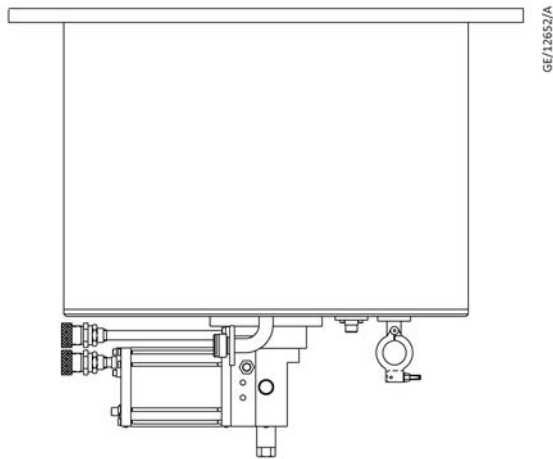

3. Technical data

3.1 Specifications

Table 1 Specifications Cryo-Torr 4F

Parameter	Specifications
Rough pump connection	NW 25 ISO KF
Integrated hardware	Second stage diode
Pumping speeds	
Water	1100 l s ⁻¹
Air	370 l s ⁻¹
Hydrogen	370 l s ⁻¹
Argon	310 l s ⁻¹
Argon throughput	700 scc/min (9 Torr l s ⁻¹)
Capacity	
Argon	210 std. liters
Hydrogen	3 std. liters @ 5 x 10 ⁻⁶ Torr
Crossover	100 Torr-liters
Cooldown time	
60 Hz	75 min
50 Hz	90 min
Dimensions	Refer to Installation/Interface drawing
Weight	37 lbs. (17 kg)

Table 2 Specifications Cryo-Torr 8

Parameter	Specifications
Rough pump connection	NW 25 ISO KF
Integrated hardware	Second stage diode
Pumping speeds	
Water	4000 l s ⁻¹
Air	1500 l s ⁻¹
Hydrogen	2200 l s ⁻¹
Argon	1200 l s ⁻¹
Argon throughput	700 scc/min (9 Torr l s ⁻¹)
Capacity	
Argon	1000 std. liters
Hydrogen	17 std. liters @ 5 x 10 ⁻⁶ Torr

Parameter	Specifications
Crossover	150 Torr-liters
Cooldown time	
60 Hz	90 min
50 Hz	110 min
Dimensions	Refer to Installation/Interface drawing
Weight	45 lbs. (20 kg)

Table 3 Specifications Cryo-Torr 8F

Parameter	Specifications
Rough pump connection	NW 25 ISO KF
Integrated hardware	Second stage diode
Pumping speeds	
Water	4000 l s ⁻¹
Air	1500 l s ⁻¹
Hydrogen	2200 l s ⁻¹
Argon	1200 l s ⁻¹
Argon throughput	700 scc/min (8.9 Torr l s ⁻¹)
Capacity	
Argon	1000 std. liters
Hydrogen	8 std. liters @ 5 x 10 ⁻⁶ Torr
Crossover	150 Torr-liters
Cooldown time	
60 Hz	90 min
50 Hz	110 min
Dimensions	Refer to Installation/Interface drawing
Weight	42 lbs. (19 kg)

Table 4 Specifications Cryo-Torr 10

Parameter	Specifications
Rough pump connection	NW 25 ISO KF
Integrated hardware	Second stage diode
Pumping speeds	
Water	9000 l s ⁻¹
Air	3000 l s ⁻¹
Hydrogen	5000 l s ⁻¹
Argon	2500 l s ⁻¹
Argon throughput	1500 scc/min (19 Torr l s ⁻¹)

Parameter	Specifications
Capacity	
Argon	2000 std. liters
Hydrogen	24 std. liters @ 5×10^{-6} Torr
Crossover	300 Torr-liters
Cooldown time	
60 Hz	100 min
50 Hz	120 min
Dimensions	Refer to Installation/Interface drawing
Weight	85 lbs. (39 kg)

Table 5 Specifications Cryo-Torr 10F

Parameter	Specifications
Rough pump connection	NW 25 ISO KF
Integrated hardware	Second stage diode
Pumping speeds	
Water	9500 l s^{-1}
Air	3600 l s^{-1}
Hydrogen	6000 l s^{-1}
Argon	3000 l s^{-1}
Argon throughput	1500 scc/min (19 Torr l s^{-1})
Capacity	
Argon	2000 std. liters
Hydrogen	24 std. liters @ 5×10^{-6} Torr
Crossover	300 Torr-liters
Cooldown time	
60 Hz	100 min
50 Hz	120 min
Dimensions	Refer to Installation/Interface drawing
Weight	90 lbs. (41 kg)

Table 6 Specifications Cryo-Torr 250F standard capacity

Parameter	Specifications
Rough pump connection	NW 25 ISO KF
Integrated hardware	Second stage diode
Pumping speeds	
Water	6500 l s^{-1}
Air	2200 l s^{-1}

Parameter	Specifications
Hydrogen	3200 l s ⁻¹
Argon	1800 l s ⁻¹
Argon throughput	700 scc/min
Capacity	
Argon	1000 std. liters
Hydrogen	16 std. liters @ 5 x 10 ⁻⁶ Torr
Crossover	150 Torr-liters
Cooldown time	
60 Hz	100 min
50 Hz	120 min
Dimensions	Refer to Installation/Interface drawing
Weight	48 lbs. (22 kg)

Table 7 Specifications Cryo-Torr 250FH high capacity

Parameter	Specifications
Rough pump connection	NW 25 ISO KF
Integrated hardware	Second stage diode
Pumping speeds	
Water	6500 l s ⁻¹
Air	2200 l s ⁻¹
Hydrogen	4500 l s ⁻¹
Argon	1800 l s ⁻¹
Argon throughput	700 scc/min
Capacity	
Argon	1000 std. liters
Hydrogen	24 std. liters @ 5 x 10 ⁻⁶ Torr
Crossover	150 Torr-liters
Cooldown time	
60 Hz	100 min
50 Hz	120 min
Dimensions	Refer to Installation/Interface drawing
Weight	48 lbs. (22 kg)

Table 8 Specifications Cryo-Torr 400 standard capacity

Parameter	Specifications
Rough pump connection	NW 25 ISO KF
Integrated hardware	Second stage diode

Parameter	Specifications
Pumping speeds	
Water	16000 l s ⁻¹
Air	6000 l s ⁻¹
Hydrogen	5000 l s ⁻¹
Argon	5000 l s ⁻¹
Argon throughput	500 scc/min (6 Torr l s ⁻¹)
Capacity	
Argon	2500 std. liters
Hydrogen	15 std. liters @ 5 x 10 ⁻⁶ Torr
Crossover	300 Torr-liters
Cooldown time	
60 Hz	150 min
50 Hz	180 min
Dimensions	Refer to Installation/Interface drawing
Weight	160 lbs. (73 kg)

Table 9 Specifications Cryo-Torr 400 high capacity

Parameter	Specifications
Rough pump connection	NW 25 ISO KF
Integrated hardware	Second stage diode
Pumping speeds	
Water	16000 l s ⁻¹
Air	6000 l s ⁻¹
Hydrogen	12000 l s ⁻¹
Argon	5000 l s ⁻¹
Argon throughput	500 scc/min (6 Torr l s ⁻¹)
Capacity	
Argon	2500 std. liters
Hydrogen	42 std. liters @ 5 x 10 ⁻⁶ Torr
Crossover	300 Torr-liters
Cooldown time	
60 Hz	150 min
50 Hz	180 min
Dimensions	Refer to Installation/Interface drawing
Weight	160 lbs. (73 kg)

Table 10 Specifications Cryo-Torr 500

Parameter	Specifications
Rough pump connection	NW 25 ISO KF
Integrated hardware	Second stage diode
Pumping speeds	
Water	30000 l s ⁻¹
Air	10000 l s ⁻¹
Hydrogen	10000 l s ⁻¹
Argon	8400 l s ⁻¹
Argon throughput	500 scc/min (6 Torr l s ⁻¹)
Capacity	
Argon	3000 std. liters
Hydrogen	16 std. liters @ 5 x 10 ⁻⁶ Torr
Crossover	500 Torr-liters
Cooldown time	
60 Hz	180 min
50 Hz	220 min
Dimensions	Refer to Installation/Interface drawing
Weight	205 lbs. (93 kg)

Table 11 Specifications Cryo-Torr 20HP

Parameter	Specifications
Rough pump connection	NW 25 ISO KF
Integrated hardware	Second stage diode
Pumping speeds	
Water	31500 l s ⁻¹
Air	10000 l s ⁻¹
Hydrogen	15000 l s ⁻¹
Argon	8400 l s ⁻¹
Argon throughput	1500 scc/min (19 Torr l s ⁻¹)
Capacity	
Argon	5700 std. liters
Hydrogen	46 std. liters @ 5 x 10 ⁻⁶ Torr
Crossover	300 Torr-liters
Cooldown time	150 min
Dimensions	Refer to Installation/Interface drawing
Weight	152 lbs. (69 kg)

Table 12 Specifications Diode Voltage vs. Temperature

Temperature (Kelvin)	Voltage (Volts)
11	1.35454
15	1.27389
17	1.24142
19	1.21089
21	1.17908
25	1.11879
45	1.08087
77	1.02820
290	0.58263

Note:

The supply current must be 10 μ A.

3.2 Cryo-Torr Operating and storage conditions

Table 13 Cryo-Torr operating and storage conditions

Parameter	Specifications
Ambient operating temperature range	50 – 100 °F (10 – 38 °C)
Humidity	20 % – 85 % RH, non-condensing
Indoor or outdoor use	Indoor
Altitude (maximum)	2000 m
Product's environmental use	Not intended for use in wet locations

Additional information

Environmental considerations pollution degree:

The Cryo-Torr Cryopumps have a pollution degree rating of 2 which means that normally non-conductive pollution may occur.


Note:

The Cryo-Torr Cryopumps are an overvoltage category II.

4. Installation

Installation information is presented for experienced and non-experienced Cryo-Torr Cryopump system technicians. The flowchart in [Figure: Block diagram for Cryo-Torr system installation](#) highlights the major tasks for installation of Cryo-Torr Cryopumps. Refer to [Figure: Block diagram for Cryo-Torr system installation](#) and the appropriate installation procedure within this section for the type of Cryopump being installed.

Figure 10 Block diagram for Cryo-Torr system installation

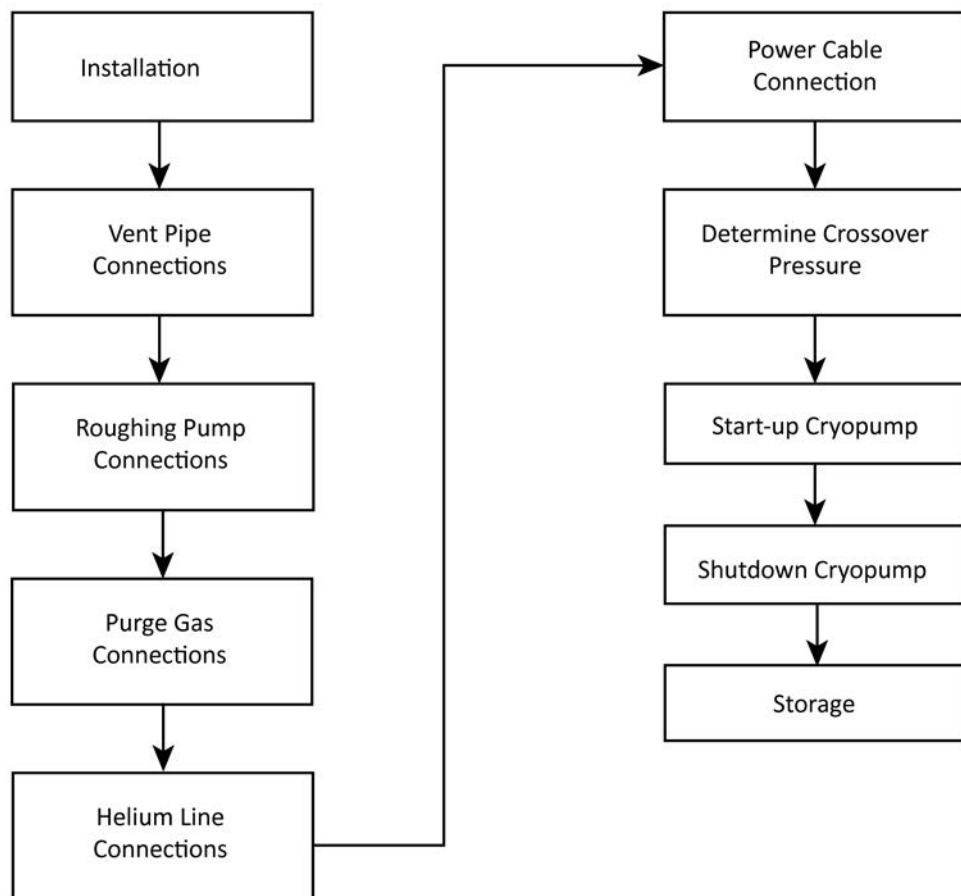

GE/12653/A

The Cryopump may be installed in any orientation without affecting its performance.

Before mounting the Cryopump to the vacuum system, a high-vacuum isolation valve (Hi-Vac valve) should be installed between the Cryopump and vacuum chamber to isolate the Cryopump from the chamber during rough pumping, cooldown, and regeneration.

Install the Cryopump to the vacuum system as follows:

1. Remove the protective cover from the main flange of the Cryopump.
2. Clean all sealing surfaces and install the O-ring or metal seal gasket as appropriate.
3. Mount the Cryopump to the Hi-Vac valve or vacuum chamber mounting flange. Follow the mating flange manufacturers recommendations for the required hardware and securing procedures. Use all of the required mounting hardware.

4.1 Vent pipe connection



WARNING: TOXIC MATERIAL



Risk of death due to toxic materials. If toxic, corrosive, or flammable gases are pumped, a vent pipe must be connected to the Cryopump relief valve and directed to a safe location.



The Cryopump pressure relief valve can be vented directly into the room or can be connected to an exhaust system.

When connecting a vent pipe to your Cryopump, the 1.30 inch diameter x 1.38 inch long volume around the relief valve must remain open for proper relief valve operation.

Vent pipe adapters are available from CTI-CRYOGENICS - (Part number - 8080250K008).

4.2 Roughing pump connection


Connect your Cryo-Torr Cryopump to a roughing pump system using a roughing line with the largest inside diameter possible to minimize the roughing time required during start-up procedures prior to normal operation. The roughing pump should have a blank-off pressure of less than 20 microns. The roughing pump connects to the Cryo-Torr Cryopump roughing valve. The valve will accept an ISO NW-25 flange.

A molecular sieve roughing trap to minimize oil backstreaming from your roughing pump system is recommended and should be installed in the roughing pump line near the roughing pump. The trap must be properly maintained. Connect the roughing valve to the roughing pump as follows:

1. Install the roughing pump line to the Cryopump roughing valve port using the clamp provided.
2. Tighten the clamp securely.

4.3 Purge gas connection

Connect your purge gas supply line to the purge valve 1/8 NPTF fitting. Adjust the supply pressure to achieve 1-2 cfm.

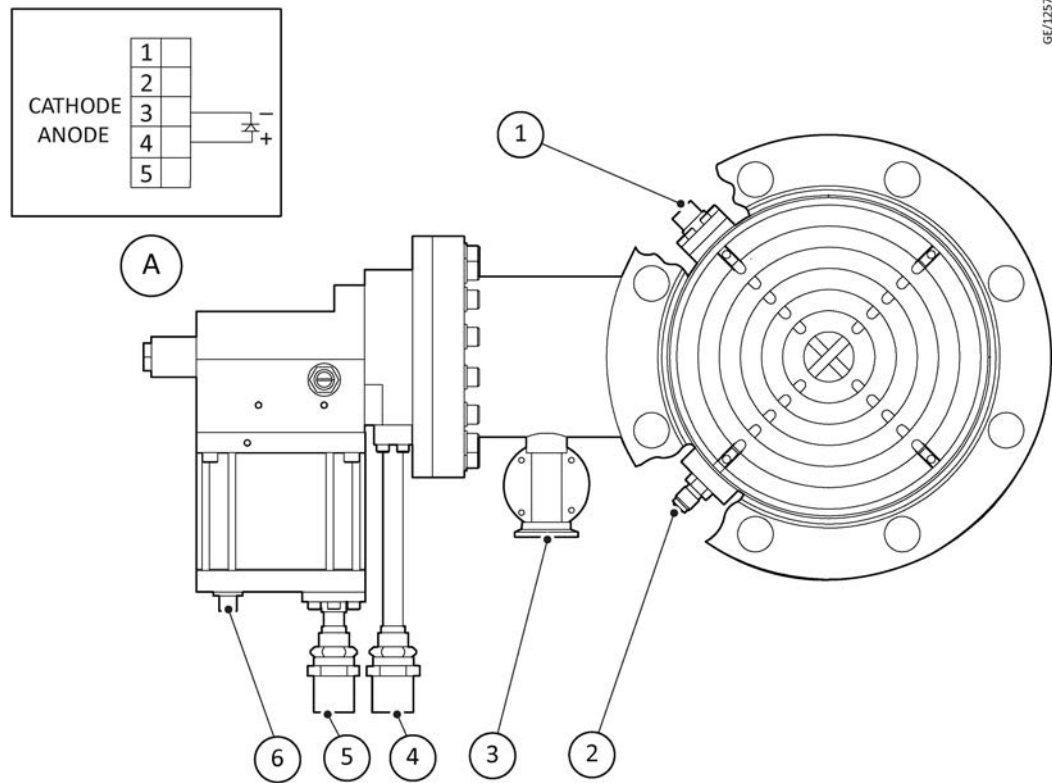Figure 11 Gas/Electrical components on a typical Cryo-Torr Cryopump

GE/12577/B

A. Temperature sensor schematic

- | | |
|---|-----------------------------------|
| 1. Temperature sensor mates with Amphenol P/N 48-16R-10-5S/48-23-41 | 2. Purge gas port |
| 3. Relief valve | 4. Helium gas supply fitting |
| 5. Helium gas return fitting | 6. Cold head electrical connector |

4.4 Helium return and supply line connections

Make the connections between the Cryopump and compressor. Refer to [Figure: Gas/Electrical components on a typical Cryo-Torr Cryopump](#), while making the component interconnections.

1. Remove all dust plugs and caps from the supply and return lines, compressor, and Cryopump. Check all fittings.
2. Connect the helium-return line from the gas-return connector on the rear of the compressor to the gas-return connector on the Cryo-Torr Cryopump.
3. Connect the helium supply line from the supply connector on the cartridge to the gas-supply connector on the Cryo-Torr Cryopump.
4. Attach the supply and return line identification decals (CTI-CRYOGENICS supplied) to their respective connecting piping ends.

Note:

Verify proper helium supply static pressure as described in the Installation Section of the appropriate Compressor Manual.

4.5 Power cable connection



CAUTION: ELECTRICAL HAZARD

Risk of electric shock. The system power circuit breaker switch at the back of the compressor must be in the OFF position before making any and all electrical connections. Do not connect the compressor to its power source until all connections have been made between the components of the Cryo-Torr system.

1. Connect the Cryo-Torr power cable from the cold head connector on the compressor to the Cryo-Torr Cryopump power connector.

4.6 Crossover pressure calculations

Crossover is that point in time when the pumping of a vacuum chamber is switched from *rough* pumping to *high-vacuum* pumping. Rough pumping brings the vacuum chamber pressure from one atmosphere (760 Torr) down to a pressure of approximately 0.5 Torr. At crossover, the roughing valve is closed and the high vacuum valve is opened bringing the vacuum chamber down to a pressure typically less than 10^{-6} Torr. This momentary pulse of gas and water molecules is cryo-condensed on the arrays of the Cryo-Torr Cryopump.

To determine the maximum permissible crossover pressure (CP), perform the following calculation using the crossover values (CV) for your model Cryo-Torr Cryopump shown in [Table: Crossover values](#) and the actual volume of your vacuum chamber (VC).

Table 14 Crossover values

Cryo-Torr Pump	Torr-Liters
4	100
8	150
8F	150
10	300
100	40
250F	300
400	300
20HP	300
500	500

Where VC = 100 liters:

$$\begin{aligned}
 \text{CP} &= \frac{\text{Crossover value}}{\text{Vacuum chamber volume}} = \frac{\text{CV}}{\text{VC}} \\
 \text{CP} &= \frac{300 \text{ Torr-liters}}{100 \text{ liters}} = 3 \text{ Torr}
 \end{aligned}$$

4.6.1 Optimizing crossover pressure

The calculated crossover pressure may not be optimized for your system. To help prevent any backstreaming during the roughing of the vacuum chamber, you should stop roughing at as high a pressure as possible. The optimum crossover pressure for a vacuum chamber should cause a very slight rise in temperature with a rapid recovery. Increase the roughing pressure in small increments (15-20%) until the rise in temperature is noted; then drop the value by a small amount (10%). This will be the optimum pressure for that vacuum chamber.

4.7 Cryo-Torr Cryopump capacity calculations

Cryopump capacity is defined as the total standard liters of gas that can be accommodated within a Cryopump prior to regeneration. The number of hours between regeneration cycles can be easily calculated in the case of a continuous gas flow of a known gas species:

$$A = \frac{16.6 \times C}{B}$$

Where:

A = Duration of operation with a continuous gas flow (hours)

B = Gas flow (scc/min)

C = Cryo-Torr capacity for the particular gas species being flowed (std. liters) as shown in [Table: Condensable gases capacity \(Argon, Nitrogen, Oxygen, etc\)](#).

Table 15 Condensable gases capacity (Argon, Nitrogen, Oxygen, etc)

Parameter	Value
Cryopump	Cryo-Torr 10F
Standard Liters	2000
Torr-Liters	1,500,000

Example:

For a sputtering application of continuously flowing argon gas at 70 scc/min, the duration of continuous operation with this gas flow (between regeneration) would be:

$$A = \frac{16.6 \times 2000 \text{ (std. liters)}}{70 \text{ (scc/min)}} = 474 \text{ h}$$

4.8 Crossover cycle calculations

The number of crossover cycles between regeneration cycles can also be easily calculated when the crossover pressure and vacuum chamber volume are known:

$$N = \frac{760000 \text{ Torr-liters}}{P \times V}$$

Where:

N = Number of crossover cycles

V = Volume of vacuum chamber (liters)

P = Pressure of vacuum chamber prior to crossover (Torr)
(roughing pressure)

Example:

For a vacuum chamber of 100 liters and a roughing pressure of 1.5 Torr, the number of crossover cycles between regeneration cycles would be:

$$N = \frac{760000 \text{ Torr-liters}}{1.5 \text{ (Torr)} \times 100 \text{ (liters)}} = 5060 \text{ cycles}$$

4.9 Cryopump start-up procedure

1. Close the Hi-Vac valve to isolate the Cryo-Torr Cryopump.
2. Initiate a Nitrogen purge of the Cryo-Torr Cryopump for one hour.
3. Open the roughing valve and rough the Cryo-Torr Cryopump to 50 microns. Close the roughing valve.

 Note:

If step 4 cannot be achieved, repeat step 3.

4. Check the rate-of-rise. The rate-of-rise should be 10 microns/min.

 Note:

Cryo-Torr Cryopump power is turned ON/OFF when compressor power is turned ON/OFF.

5. Turn compressor power ON.
6. Wait for the second stage temperature (T2) to be less than 17 K.
7. Open the Hi-Vac valve.

4.10 Cryopump shutdown procedure

Typically, a Cryopump can be left in operation continuously if you are not processing or not using the vacuum chamber, by simply closing the Hi-Vac valve to isolate the Cryopump from your vacuum chamber. You are now able to load, unload, repair or replace components in the chamber and the Cryopump will be available for restarting the process as necessary.

1. Close the Hi-Vac valve to isolate the Cryopump.
2. Shut off the Cryopump by removing the input power cable to the Cryopump motor.
3. Initiate Nitrogen gas purge.
4. Continue Nitrogen gas purge until ambient temperature is reached.
5. Shut off the Nitrogen gas purge.

4.11 Cryopump storage



WARNING: TOXIC MATERIAL

Risk of death due to toxic materials. If the Cryopump has been used to pump toxic or dangerous materials, you must take adequate precautions to safeguard personnel. If such a Cryopump is shipped to a Product Service Department, clearly mark on all storage cartons the identity of the toxic or dangerous materials to which the Cryopump has been subjected. All shipped equipment that contains hazardous/toxic materials must conform to DOT regulations.

If the Cryopump is stored while attached to your vacuum system, the Cryopump vacuum vessel should be kept at a slight positive atmospheric pressure with dry nitrogen or argon.

If the Cryopump is removed from your vacuum system, install the protective cover on the mounting flange of the Cryopump vacuum vessel inlet before storage.

The remaining components of your Cyro-Torr high vacuum pump system are fully protected during storage if kept under positive helium pressure and all component connections left connected. Periodically, check the helium supply pressure gauge on the compressor and refer to the compressor manual for the proper static charge pressure.

5. Operation

Your Cryo-Torr Cryopump consists of a cold head and a vacuum vessel. An 80K condensing array, a 15K array, cold head station heaters, and an 80K radiation shield are located in the vacuum vessel. The cold station heaters and 15K array are secured to the cold head, which is welded to the vacuum vessel. The cold head provides cooling to the three arrays. Gases are removed from your vacuum chamber, thereby creating a vacuum when they are condensed or adsorbed on the cryogenically-cooled arrays.


5.1 Cold head

The cold head consists of a two-stage cold head cylinder (part of the vacuum vessel) and drive unit displacer assembly, that together produce closed-cycle refrigeration at temperatures that range from 60 to 120K for the first-stage cold station to 10 to 20K for the second-stage cold station, depending on operating conditions. Within the drive unit displacer assembly, the drive unit actuates the displacer-regenerator assembly located in the cold head cylinder and thereby controls the flow of helium into the cold head. Within the drive unit are located the crankcase and drive motor, which is a direct-drive constant-speed motor, operating at 72 rpm on 60 Hz power and 60 rpm on 50 Hz power.

During operation, high pressure helium from the compressor enters the cold head at the helium supply connector, and flows through the displacer-regenerator assembly, crankcase, and motor housing before exiting through the helium gas return connector and returning to the compressor. Helium expansion in the displacer-regenerator assembly provides cooling at the first and second stage cold stations.

5.2 Vacuum vessel and arrays

The 80K condensing array, as shown in [Figure: Cutaway view of a typical Cryo-Torr pump](#), condenses water and hydrocarbon vapors. The 15K array condenses nitrogen, oxygen, and argon while the specially processed charcoal of this array traps helium, hydrogen, and neon.

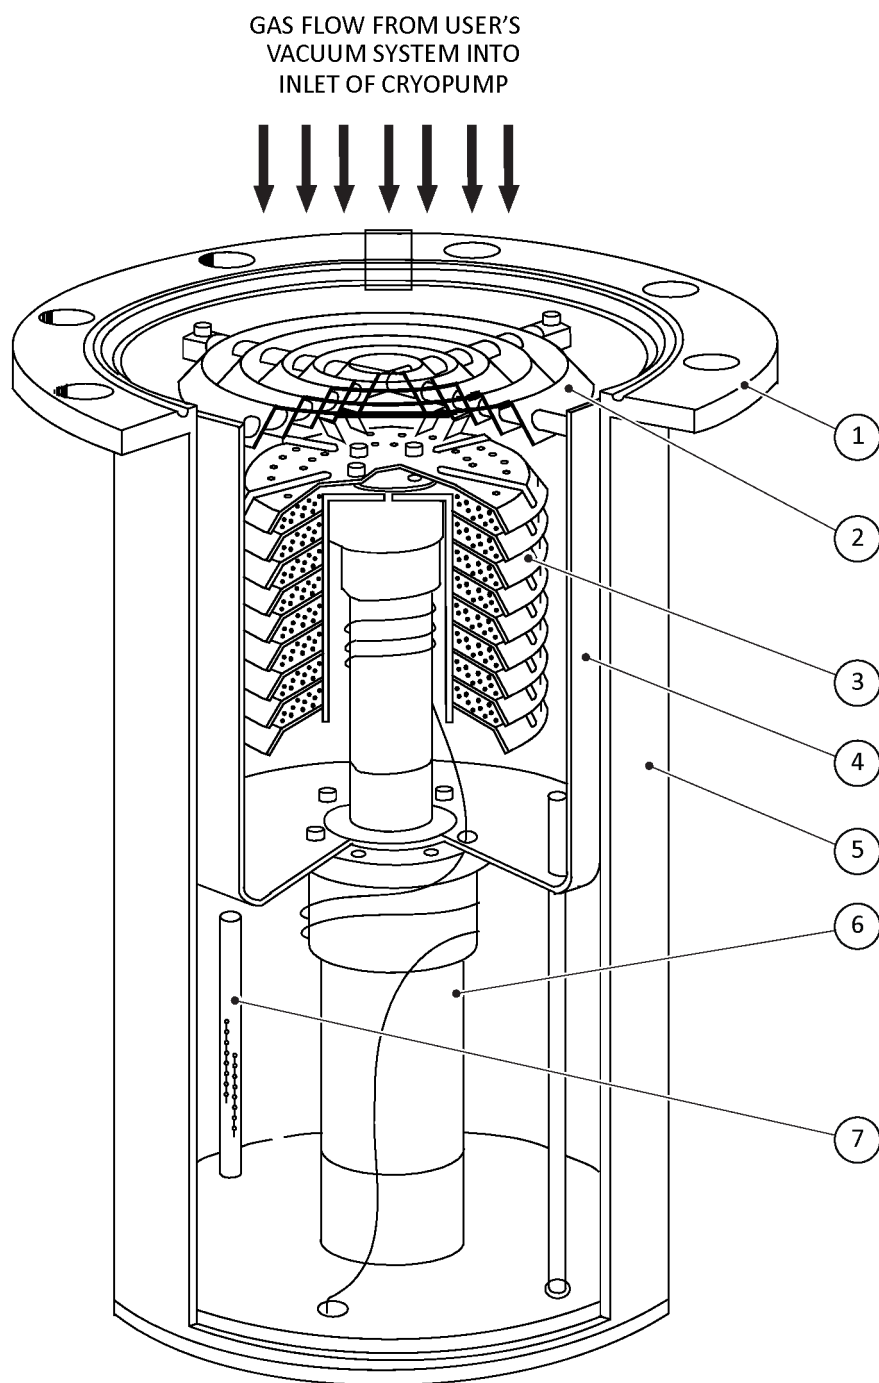Figure 12 Cutaway view of a typical Cryo-Torr pump

- | | |
|----------------------|--------------------------|
| 1. Mounting flange | 2. 80 K condensing array |
| 3. 15 K array | 4. 80 K radiation shield |
| 5. Vacuum vessel | 6. Cold head cylinder |
| 7. Stand pipe filter | |

5.3 Compressor gas and oil flows

Helium returning from the Cryopump cold head enters the compressor, and a small quantity of oil is injected into the gas stream, thereby overcoming helium's low specific heat and inability to carry heat produced during compression. Helium is then

compressed and passed through a heat exchanger for removal of compression-caused heat.

The helium continues its flow through an oil-mist separator and a charcoal filter adsorber (cartridge), within the compressor, where oil and contaminants are removed. A differential pressure relief valve in the compressor limits the operating pressure differential between the helium supply and return lines, thereby allowing compressor operation without cold head operation. When cold head operation reaches a steady-stage condition, further pressure regulation is unnecessary.

5.4 Cryo-Torr interface

The Cryo-Torr Interface, shown in [Figure: Cutaway view of a typical Cryo-Torr pump](#), is required when; connecting more than one Cryo-Torr Cryopump to a variety of CTI-CRYOGENICS Compressors, or when connecting a single Cryo-Torr Cryopump to the 9000 AND 8510 Series of compressors.

The Cryo-Torr Interface accepts input Cryopump power from the compressor and distributes it to a maximum of three Cryo-Torr Cryopumps. The Cryo-Torr Interface also supports a Compressor Remote feature which can be used to turn the Cryo-Torr Cryopumps off when the compressor is turned off.

Figure 13 Cryo-Torr interface



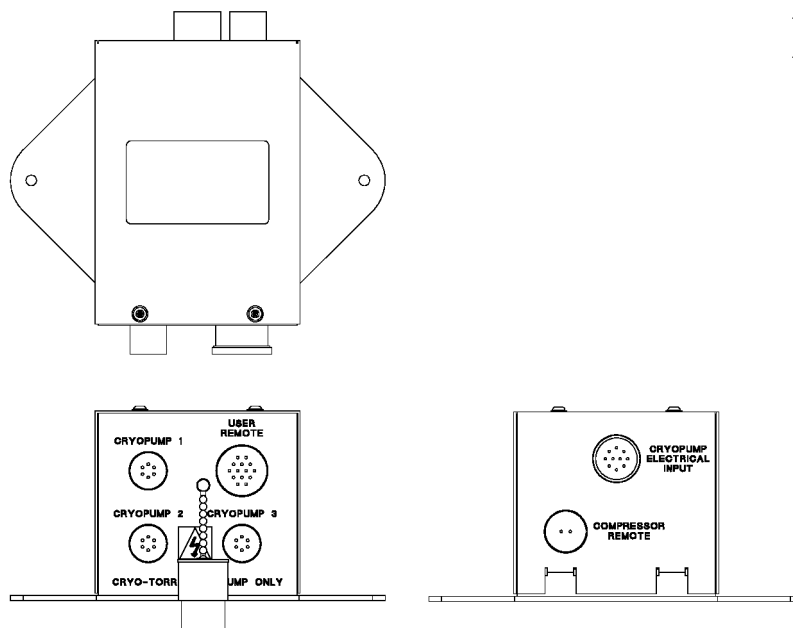


Figure 14 Typical Cryo-Torr system with 9600 series compressor

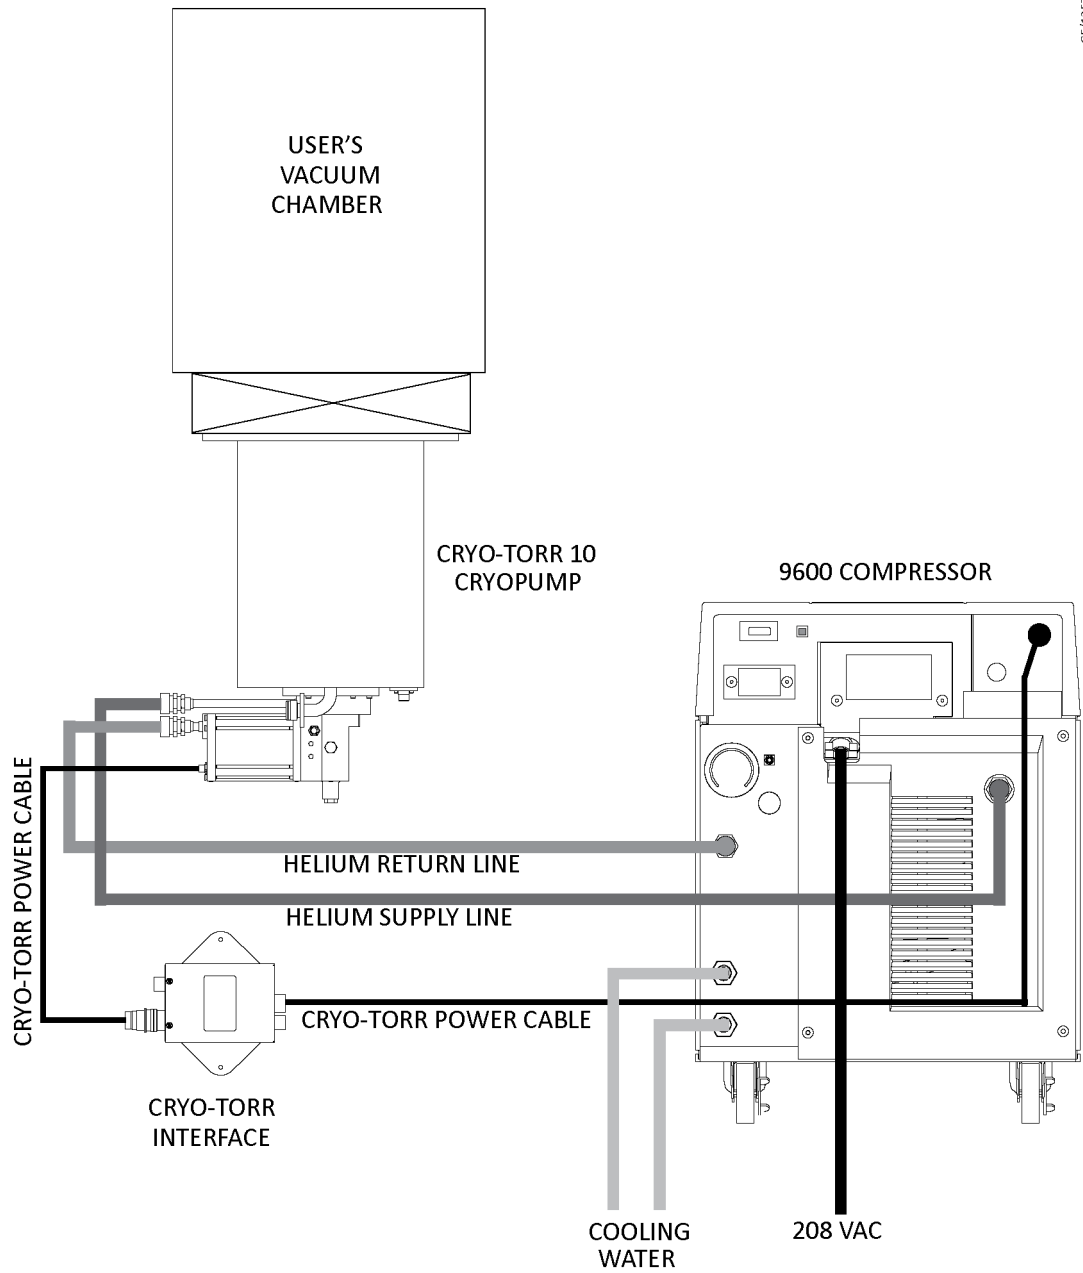


GE/12574/A

Figure 15 Typical Cryo-Torr system with 8200 series compressor

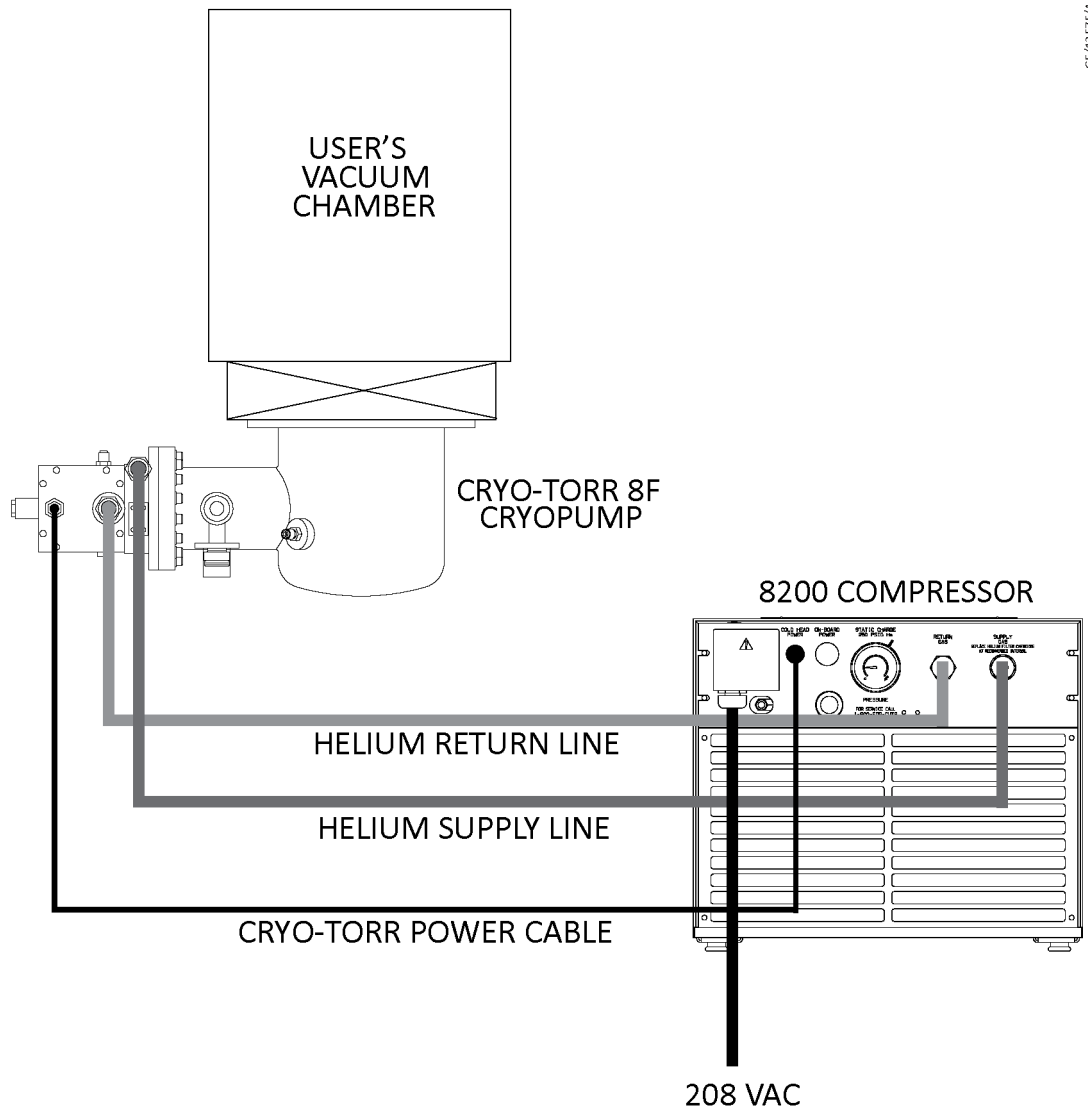

GE/13575/A

Figure 16 Typical Cryo-Torr system with 8600 series compressor

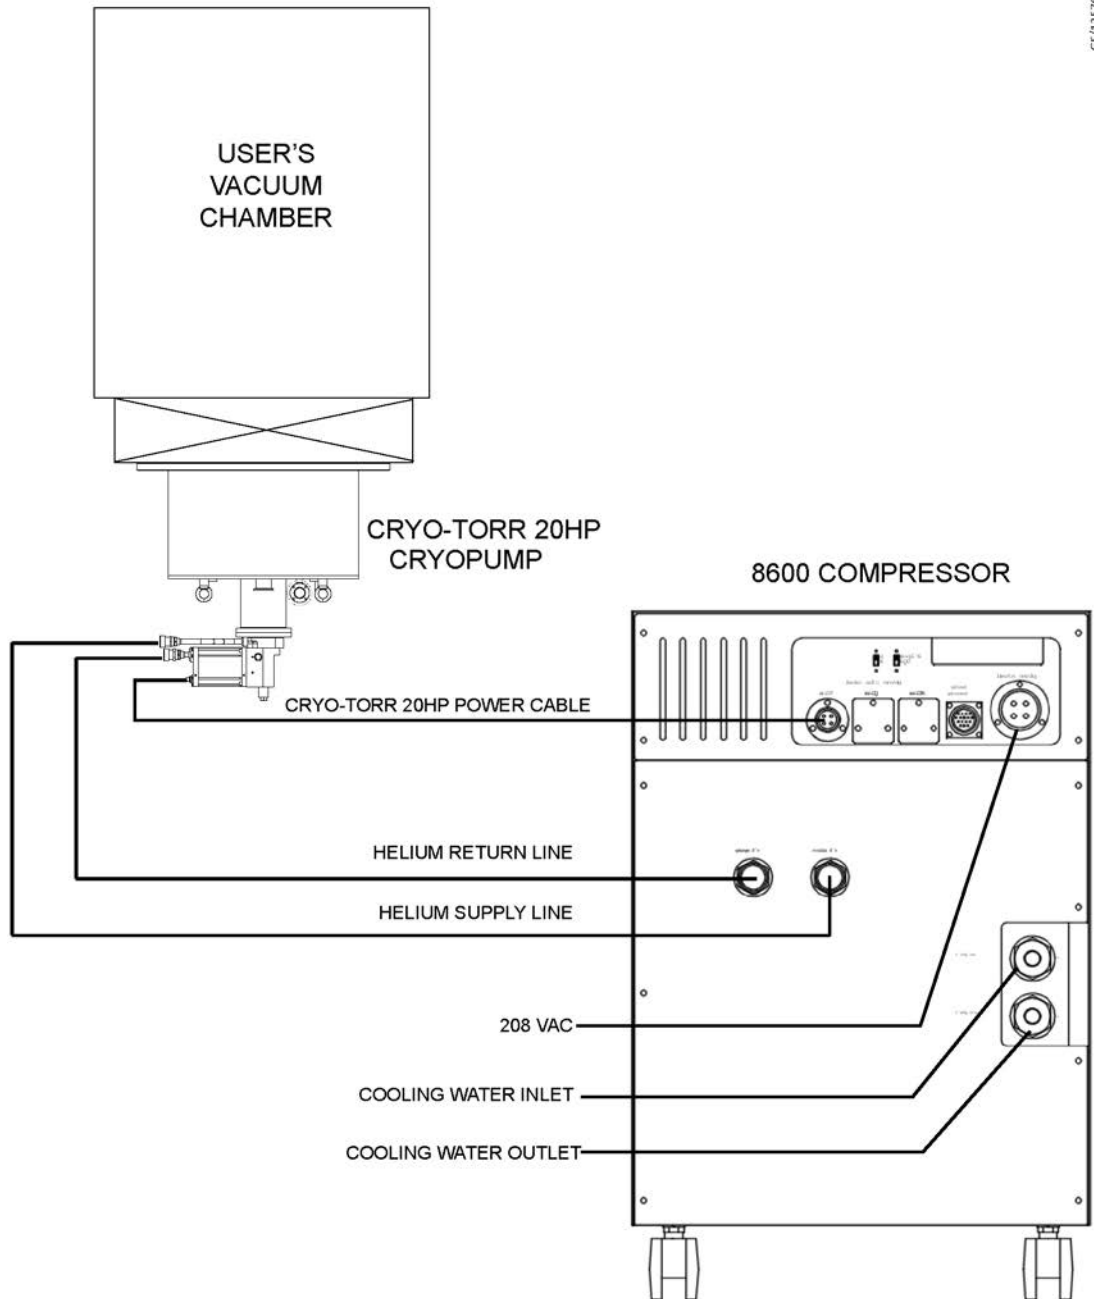

6. Regeneration



WARNING: TOXIC MATERIAL



Risk of death due to toxic materials. If toxic, corrosive, or flammable gases are pumped, a vent pipe must be connected to the Cryopump relief valve and directed to a safe location.



A Cryo-Torr Cryopump periodically requires a regeneration cycle to return it to its original operating capabilities.

Gases captured from a vacuum chamber and trapped in the Cryopump through condensation and cryo-adsorption are held primarily in an ice-like form. A regeneration cycle removes trapped gases through a process similar to defrosting a refrigerator freezer compartment.

During a regeneration cycle, the Cryopump is warmed to room temperature or higher, allowing trapped gases to change from a solid state to a gaseous state and thereby released from the Cryopump through the pressure relief valve to the atmosphere.

6.1 When to regenerate

The need to regenerate the Cryo-Torr pump as a result of saturation is a function of the Cryopump capacity and the process gas throughput.

If the Cryopump becomes incapable of maintaining a high-vacuum (typically an increase in your vacuum chamber base pressure by a factor of 10, even though the cold head and compressor unit are operating satisfactorily), the Cryopump requires regeneration.

It is recommended that your Cryopump be regenerated on a regular schedule coinciding with system maintenance, weekend system shutdown, etc. A suitable time interval between regeneration cycles can be determined from experience.

Extended loss of electrical power (10 min or longer), system vacuum failure, such as venting with a partially open vacuum isolation valve, and operator error may necessitate Cryopump regeneration.

 Note:

Short term electrical outages of up to 10 min should not result in the need to regenerate your Cryopump.

6.2 Assisted regeneration

A regeneration cycle incorporating the use of a heated dry inert purge gas (nitrogen/argon) is the preferred method of regeneration and will overcome unassisted regeneration technical difficulties by:

- Minimizing the required time to bring the condensing and cryo-adsorbing arrays to room temperature.

- Reducing the time required to rough the Cryopump because the dry inert purge gas will minimize the amount of residual water vapour in the 15K array.
- Diluting hazardous gases and ensuring their removal from the Cryopump housing.

Table 16 Required accessories for assisted regeneration

Part number	Description
8080250K020	Purge gas heater, 110 V
8080250K023	Purge gas solenoid valve, 110 V

 Note:

Call 1-800-FOR-GUTS to obtain the accessories listed in above table.

1. Close the Hi-Vac isolation valve.
2. Shut off the Cryopump by setting the System Power switch on the compressor to the OFF position.
3. Immediately introduce heated dry purge gas through the vacuum vessel purge fitting at approximately 150 °F (66 °C) and at a flow rate of 1 -2 cfm. Allow the purge gas to vent through the relief valve.
4. Halt the gas purge when the condensing arrays reach 80 °F (26 °C) (300K).
5. When the condensing arrays reach ambient temperature, rough the Cryopump to an initial starting pressure, usually between 50 and 100 microns.

 Note:

After roughing, perform a rate-of-rise (ROR) test to ensure that your Cryopump regeneration has been thorough and that no air-to-vacuum leaks are present.

6. Perform the rate-of-rise test as follows:
 - a. Once the roughing cycle has roughed the Cryopump starting pressure to between 50 - 100 microns, close the roughing valve.
 - b. Observe the rate of pressure rise (ROR) over a five minute period.

 Note:

The ROR should be less than 10 microns/minute over a five minute period (50 microns total).

- c. If the ROR is greater than 50 microns, re-purge the Cryopump, check for leaks, and repeat steps 5 and 6.
7. Close the Cryopump roughing valve and start the Cryopump.
 8. The Cryopump is ready for use when the second stage array reaches a temperature of 20K or lower.

7. Maintenance

7.1 Helium circuit decontamination

Contamination of the helium-gas circuit is indicated by sluggish or intermittent operation (ratchetting) of the cold head drive mechanism. With severe contamination the cold head drive may seize and fail to operate. One of the major sources of contamination is using helium gas of less than the required purity. When performing the decontamination process, use only 99.999% pure-helium gas, and the regulator and charging line must be properly connected and purged.

This decontamination procedure will remove contaminants from the cold head and/or compressor, thereby restoring system performance. The coldtrapping of contaminants inside the cold head during this procedure will also decontaminate the compressor if the contamination of the system is not severe. Separate decontamination of the compressor is required whenever the compressor has been opened to atmosphere, or the pressure dropped to zero.

7.2 Cryo-Torr Cryopump decontamination procedures

1. Cool down the Cryopump and operate it for one to three hours. If the system will not cool down, proceed to step 2. Operating the Cryopump will isolate the contaminants by "freezing" them in the cold head. The contaminants in the helium-gas circuit of the Cryopump tend to become frozen inside the cold head. The longer the Cryopump is operated beyond the one-hour period, the greater is the amount of contamination that becomes isolated inside the cold head.
2. Shut down the Cryopump as described in [Installation](#) on page 20.
3. Immediately disconnect the helium supply and return lines from the gas-supply and gas-return connectors at the rear of the compressor. Leave them attached to the cold head.
4. Attach the maintenance manifold to the disconnected ends of the return and supply lines.
5. Reduce the pressure in the cold head to a level of 30 psig by using the maintenance manifold. Reducing the pressure in the cold head to below 30 psig (200 kPa) may introduce more contaminants into the helium circuit.

If you only have the manual regeneration option, turn the Cryopump OFF and open the purge valve until the second stage temperature reaches 290K.

6. Attach a two-stage regulator (0-3000/0-400 psig) and charging line to a helium bottle (99.999% pure). DO NOT OPEN THE BOTTLE VALVE AT THIS TIME. Purge the regulator and charging line as introduced in steps 'a' through 'd' below. Do not use helium gas that is less than 99.999% pure.
 - a. Open the regulator a small amount by turning the adjusting knob clockwise until it contacts the diaphragm; then, turn approximately 1/8 to 1/4 turn more, so that the regulator is barely open.
 - b. Slowly open the bottle valve, and purge the regulator and line for 10 to 15 seconds. Turn the regulator knob counter clockwise until the helium stops flowing.

- c. Loosely connect the charge line to the 1/8-inch Hoke valve on the maintenance manifold.
 - d. Purge the charge line again, as in step 'a', for 30 seconds, and tighten the charge line flare fitting onto the Hoke valve while the helium is flowing.
This procedure is required to ensure that both the regulator and the charging line will be purged of air and that the air trapped in the regulator will not diffuse back into the helium bottle. For best results, CTI-CRYOGENICS suggests a dedicated helium bottle, regulator, and line, which are never separated, for adding helium.
7. Perform in sequence:
- a. Backfill the cold head with helium to a static charge pressure of 195-205 psig (1345-1415 kPa) by adjusting the regulator to the required pressure, and opening the Hoke valve on the manifold. Close the Hoke valve when the pressure is correct.
 - b. Depressurize the cold head to 30 and 50 psig (200 and 330 kPa) by slowly opening the ball valve and allowing the helium to bleed out slowly. Do not reduce the pressure to less than 30 psig or the cold head may be further contaminated.
 - c. Perform the flushing steps 'a' and 'b' four more times.
 - d. Pressurize the cold head to a static charge pressure of 195-205 psig (1345-1415 kPa) and run the cold head drive motor for 10 to 30 seconds.
 - e. Perform steps 'b' through 'd' four more times for a total of 25 flushes and 5 drive-motor runs.
8. Verify that the cold head is pressurized to the static charge pressure of 195-205 psig (1345-1415 kPa).
9. Disconnect the maintenance manifold from the helium return and supply lines.
10. Reconnect the helium return and supply lines to the return and supply connectors at the rear of the compressor. The Cryopump is now ready for operation.

 Note:

Refer to appropriate compressor manual.

7.3 Cleaning the Cryo-Torr Cryopump



WARNING: TOXIC MATERIAL

Risk of death due to toxic materials. If the Cryopump has been used to pump toxic or dangerous materials, you must take adequate precautions to safeguard personnel.



CAUTION: ADSORBENT CONTAMINATION

Risk of contamination. Do not clean the 15K cryo-adsorbing array, because you may severely contaminate the adsorbent in the cleaning process.

Cleaning the arrays or other interior surfaces of the Cryopump vacuum vessel is seldom required because dust build-up does not affect performance, and the special alloy copper cryo-condensing arrays are nickel plated for corrosion resistance.

If you wish to clean the arrays and other interior surfaces, follow the procedures below.

1. Confirm that an adequate supply of indium gasket material (Part number 3543738P001) is available to replace gaskets inadvertently damaged during disassembly.
2. Carefully disassemble the components in the vacuum vessel, including the arrays and radiation shield, to avoid damage to the indium gaskets.
3. Clean the interior surface of the vacuum vessel, the 80K condensing array, and the 80K radiation shield as follows:
 - a. Wash each item in strong soap or detergent solution and hot water.
 - b. Rinse the item in clean hot water.
 - c. Air or oven dry all items at 150 °F (66 °C) maximum before reinstalling into the Cryopump.
4. Wearing lint-free gloves, reassemble the Cryopump. Replace any indium gasket damaged during disassembly with a gasket cut from indium gasket material.
5. Torque all screws that compress indium gaskets for a minimum of 5 seconds to allow proper gasket seating:

Table 17 Indium gasket screw torque specifications

Screw thread	Torque (inch-pounds)
Number 4 – 40	11
Number 6 – 32	20

8. Fault finding

The primary indication of trouble in a vacuum pumping system is a rise in base pressure in your vacuum chamber. A rise in the base pressure may be caused by a leak in the vacuum system or by a fault in the Cryopump or saturation of the 15K cryo-adsorbing charcoal array (regeneration may be necessary). If the Cryopump temperature is below 20K it must pump at rated capacity; a high base pressure is usually caused by an air-to-vacuum leak in the system.

If you suspect a leak in your vacuum system, isolate the Cryopump by closing the Hi-Vac valve and leak check your vacuum chamber. If no leaks are found, a leak may be present below the Hi-Vac valve (Cryopump). Leak checking below the Hi-Vac valve should be performed with the Cryopump shut OFF and at room temperature. Leak checking while the Cryopump is operating may mask leaks that are present (due to the ability of the Cryopump to pump helium). If no leak is found, refer to the Cryopump troubleshooting procedures summarized in [Table: Fault finding](#).

The problems presented in [Table: Fault finding](#) are followed by possible causes and corrective actions. The causes and corresponding actions are listed in their order of probability of occurrence.

Maintaining a log of certain parameters during normal operation can be a valuable tool in troubleshooting the Cryopump. The log may contain many parameters, however, the following minimum parameters should be included: the cooldown time to 20K, the roughing time to 50 μ , the time to base pressure at crossover, the time between regeneration cycles, and the compressor pressure reading.

Technical inquiries

Refer to [Appendix - Customer technical support information](#) on page 40, of this manual for a complete list of our world wide customer support centres.

Table 18 *Fault finding*

High base pressure of vacuum system, and a Cryopump temperature below 20K on page 38
High base pressure of vacuum system, and a Cryopump temperature above 20K on page 39
Cryopump fails to cool down to the required operating temperature or takes too long to reach that temperature (20K) on page 39

Fault	High base pressure of vacuum system, and a Cryopump temperature below 20K
Cause	Air-to-vacuum leak in vacuum system or in Cryopump
Remedy	Check Cryopump relief valve for proper seating. Check Cryopump for leaks. Check vacuum chamber and Hi-Vac valve for leaks.

Cause	High partial pressure of non-condensable gases (helium, hydrogen, or neon) within the Cryopump because the 15K array has reached full capacity
Remedy	Regenerate the Cryopump as described in Regeneration on page 33.
Cause	One of the arrays is loose, which is preventing good thermal contact with the cold station
Remedy	Warm the Cryopump to ambient temperature and retighten the array mounting screws to 15 – 20 in.lbs.
Fault	High base pressure of vacuum system, and a Cryopump temperature above 20K
Cause	Decrease in Cryopump cold head performance
Remedy	If the helium return pressure gauge reads below the normal-operating return pressure 60-85 psig (415-590 kPa), add gas as described in the appropriate Compressor manual.
Cause	High partial pressure of non-condensable gases (helium, hydrogen, or neon) within the Cryopump because the 15K array has reached full capacity
Remedy	Regenerate the Cryopump as described in Regeneration on page 33.
Cause	Excessive thermal load on frontal array
Remedy	Reduce the thermal radiation load by 1. Shielding the Cryopump or 2. Lowering temperature of the radiating surface.
Fault	Cryopump fails to cool down to the required operating temperature or takes too long to reach that temperature (20K)
Cause	Low helium supply pressure
Remedy	Add gas as described in the appropriate compressor manual.
Cause	Compressor problems
Remedy	Refer to Troubleshooting section of the appropriate Compressor manual.
Cause	Vacuum leak in vacuum system or Cryopump
Remedy	Check the Cryopump relief valve for proper seating. Check Cryopump for leaks. Check vacuum system for leaks.
Cause	Incomplete regeneration may not have fully cleaned the adsorbing array. Partial pressures of non-condensable gases (hydrogen, neon or helium) may remain
Remedy	Regenerate the Cryopump as described in Regeneration on page 33.

9. Appendix - Customer technical support information

When contacting us for technical support, please have the following information available.

1. Record the part number and serial number from the compressor.
2. Provide the installed location of the compressor.
3. Provide name, e-mail address, and telephone number of the person to contact.
4. List any error codes received during the failure.
5. Prepare a detailed description of the events relating to the error.
 - Time that the equipment has been in operation
 - Work that was done on the equipment prior to the error
 - Functions that the equipment was performing when the error occurred
 - Actions taken after the error and the results of those actions
 - Other information that may assist the Specialist.
6. Contact our technical support at these numbers

Location	Contact number
North America	1-800-FOR-GUTS (1-800-367-4887) US/Canada
Europe	+49 1804 CALL GUTS (+49 1804 2255 4887)
Japan	+81-45-477-5980
China	+86-21-5131-7066
Taiwan	+886-3-552-5225
Korea	+82-31-288-2500
Singapore	+65-6464-1481

For additional contact information, please go to our website at www.edwardsvacuum.com or send an E-mail to techsupport.CTIP_US@edwardsvacuum.com.

10. Service

10.1 Return the equipment or components for service

Before you send your equipment to us for service or for any other reason, you must complete a Declaration of Contamination Form. The form tells us if any substances found in the equipment are hazardous, which is important for the safety of our employees and all other people involved in the service of your equipment. The hazard information also lets us select the correct procedures to service your equipment.

If you are returning equipment note the following:

- If the equipment is configured to suit the application, make a record of the configuration before returning it. All replacement equipment will be supplied with default factory settings.
- Do not return equipment with accessories fitted. Remove all accessories and retain them for future use.
- The instruction in the returns procedure to drain all fluids does not apply to the lubricant in pump oil reservoirs.

Download the latest documents from edwardsvacuum.com/HSForms/, follow the procedure in HS1, fill in the electronic HS2 form, print it, sign it, and return the signed copy to us.

**NOTICE:**

If we do not receive a completed form, your equipment cannot be serviced.

This page has been intentionally left blank.

This page has been intentionally left blank.

